

THORN

96239828 SWITCHLITE MRE SLDD PC

Overview



The SWITCHLITE MRE SLDD PC photocell will turn lighting on when the ambient light falls below a preset level. The lighting will then be turned off when the total light level rises above a separate preset level. The unit also has a switch input for manual override.


An integral, adjustable time delay prevents nuisance switching caused by, for example, dark clouds.

The unit has a voltage free changeover output which can be used to switch a BMS or lighting control system as well as switching a load directly.

All functionality is fully programmable using an IR handset.

Features

Front features

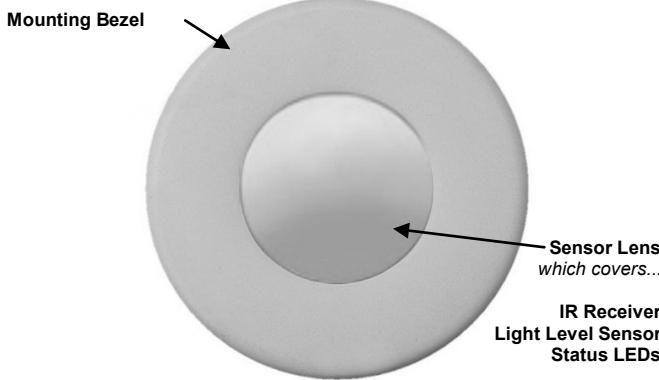

IR Receiver

Receives control and programming commands from an IR (infrared) handset.

Light Level Sensor

Measures the overall light level in the detection area


Status LEDs

The LED flashes Red to indicate the following:

Valid setting received



Back features

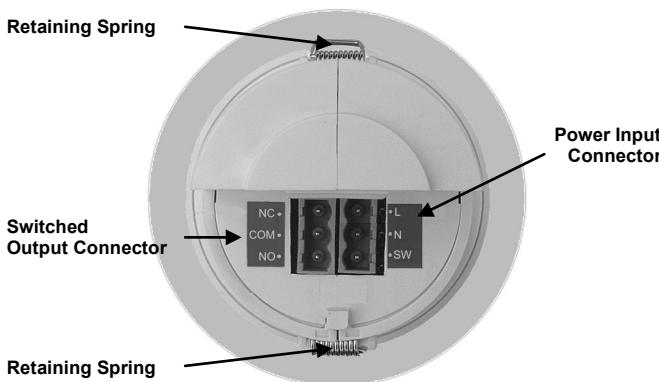

Power Connector

Used to connect mains power to the unit.

Switched Output Connector

Used to connect a switched load.


Installation

Choosing a Suitable Location


The SWITCHLITE MRE SLDD PC is designed to be ceiling mounted and must satisfy the following criteria:

- Avoid positioning the unit where direct sunlight may enter the sensor element.

Wiring Diagram - Mains load

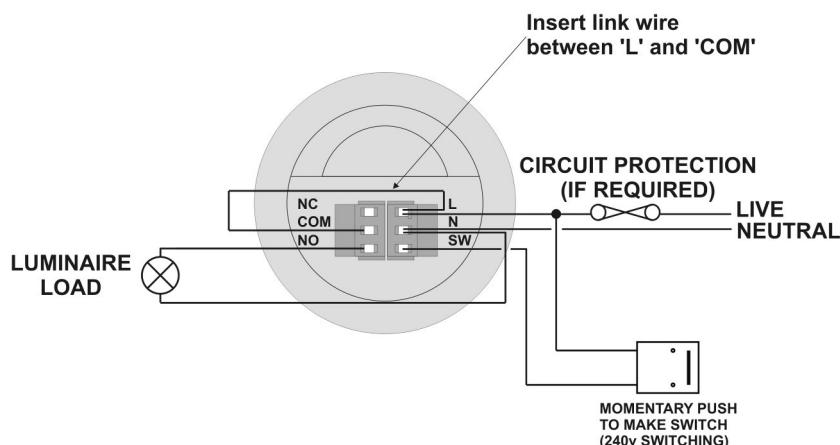


Wiring Diagram - Volt Free Contact

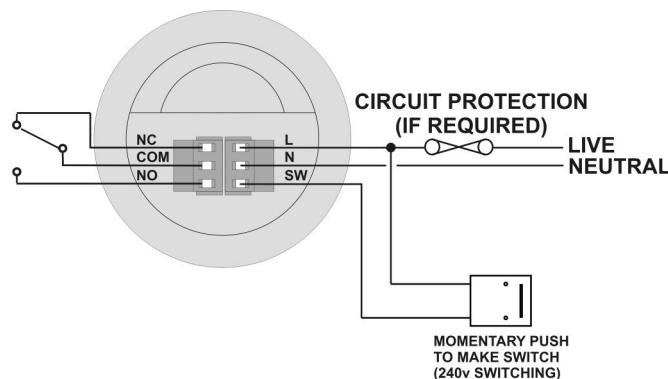

Sensor functionality

Switch Level On/Off

The device can be made dependant on the ambient light level using the Lux On Level and Lux Off Level parameters.

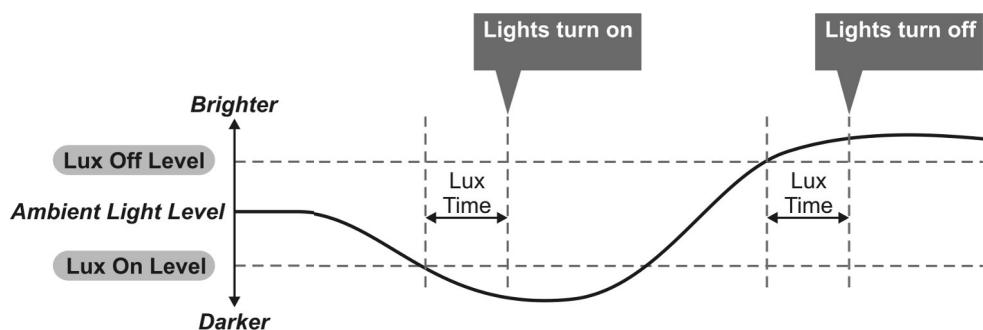

Fault finding

What if the load does not turn ON?

- Check that the live supply to the circuit is good.
- Increase the Lux on level to switch on at a higher brightness .

What if the load does not turn OFF?

- Increase the lux off level to switch off at a lower brightness.


Load cycles on and off

- Increase the difference between the lux on level and the lux off level.
- Increase the time setting.
- Angle the sensor away from the light that it is controlling.



The SWITCHLITE MRE SLDD PC is designed to be mounted using either:

- Flush fixing, or
- Surface fixing, using the optional Surface Mounting Box (part no. SWITCHLITE KIT MSF).

Both methods are illustrated below.

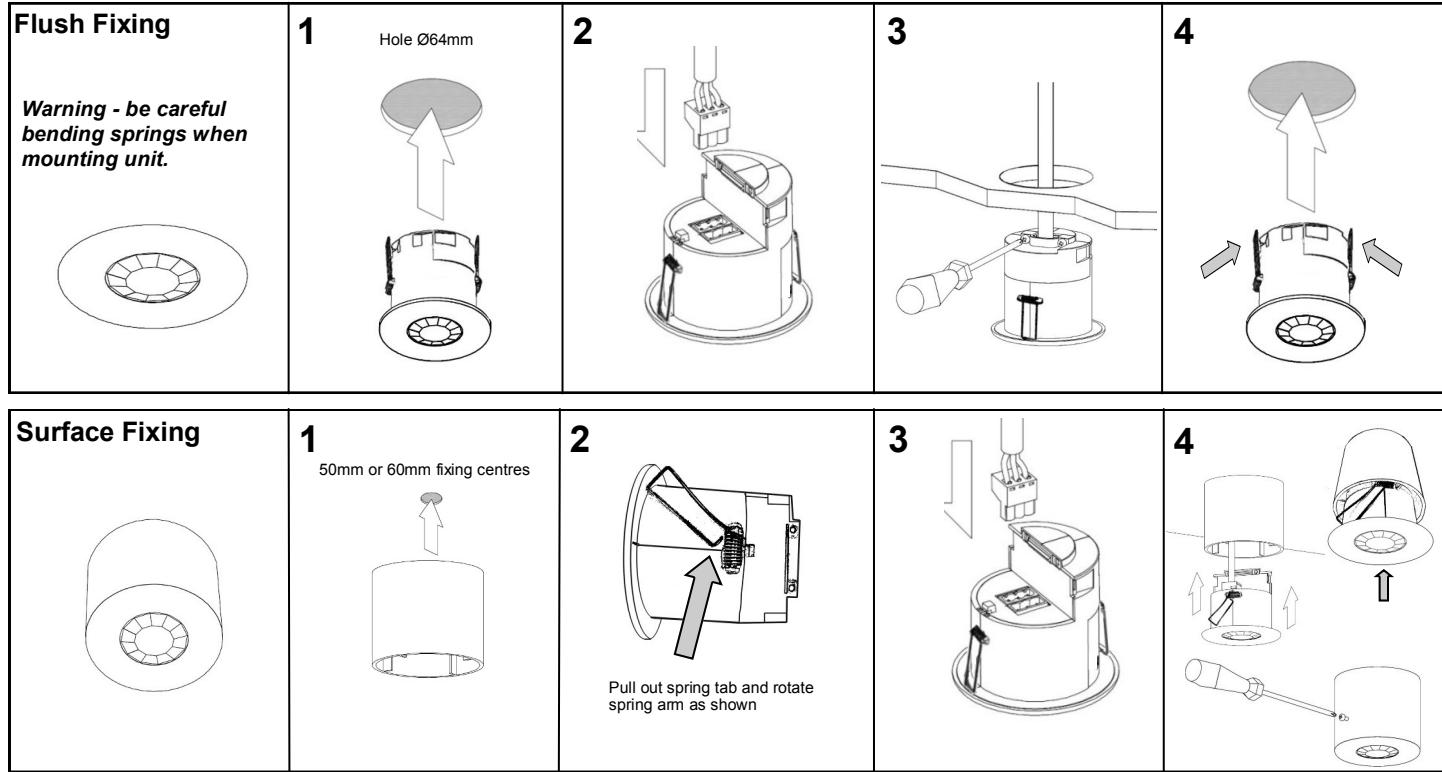

Wire stripping details

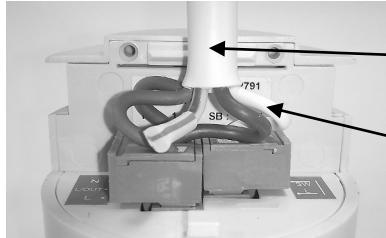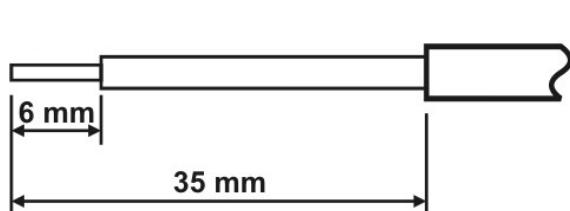

Important

Ensure that the cables are formed as shown before affixing the cable clamp. The clamp MUST clamp the outer sheath(s) only.

Bend cores as shown.

Readback function (SWITCHLITE IR handset only)

The SWITCHLITE IR has the ability to read back the settings stored in a device.

To read back individual parameters

- Navigate to the parameter and press the 'R' (Read) button whilst pointing at the device. The handset will click when the parameter has been read back, the device will flash its LED, and the value will be shown against the parameter in the menu.


To read back all of the parameters in a menu

- Press and hold the 'R' (Read) button for more than 1 second.
- The handset will click every time a parameter is received
- The device will show multiple flashes of its LED
- All of the values will be shown against the parameters in the menu.
- The individual parameters may be edited and then saved as a 'Macro'.

Notes

- If a parameter(s) has been missed because of a communication error, the missing value(s) is replaced by dashes.
- When reading back, the relay will temporarily be switched off, and will return to its normal state 2 seconds after the read back has been completed.

Basic programming

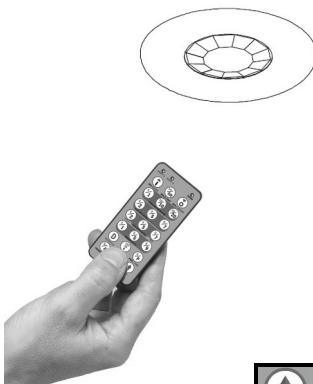

The functionality of the SWITCHLITE MRE SLDD PC is controlled by a number of parameters which can be changed or programmed by any of the following devices:

- **SWITCHLITE CC** Infrared Handset. See below for programmable functions.
- **SWITCHLITE IR** Infrared Handset (with LCD). See user guide for full programming details.

For most basic programming operations the SWITCHLITE CC handset can be used and the following procedures are based on using this device.

Point the handset at the Sensor and send the required programming commands to the unit as shown below.

Valid commands will be indicated by a red LED flash. See page 1 for details of other LED responses.

		Number of Shift key presses					SWITCHLITE CC Handset Graphics	Description
Parameter Name	Default Value	0 SHIFT 1 SHIFT 2	1 SHIFT 1 SHIFT 2	2 SHIFT 1 SHIFT 2	3 SHIFT 1 SHIFT 2			
		Button Activation						
On		On						Turn lights on.
Off		Off						Turn lights off.
Lux on level (Switch level on)	9	2, 5 & 7	4, 6 & 9					Lux level setting to prevent the luminaires being switched on if the ambient light level is sufficient (adjustable between 1 and 9). The luminaires will always be switched on at level 9.
Lux off level (Switch level off)	9	2, 5 & 7	4, 6 & 9					Lux level setting to switch the luminaires off if the ambient light level goes above the setting (adjustable between 1 and 9). Level 9 will always keep the lights on. This setting can be used for "window row switching". <i>Note: the Lux Off Level value must always be greater than the Lux On Level value.</i>
Defaults				D				Returns the unit to the default settings.
Shift								Use this button to select the settings in red and blue signified by the 'Shift 1' and 'Shift 2' LEDs

Parameter Name	Default Value	Range / Options	Description	SWITCHLITE ECC	SWITCHLITE IR
Detector Parameters					
Lux time	0	0 (disabled) 1-99 minutes	To prevent nuisance switching, an adjustable time delay can be set. This requires the light level to be maintained for the set time before changing from on to off, or off to on.	✗	✓
Factory default	-	-	Restores factory default settings	✓	✓

Switching functions					
Lux on level (Switch level on)	9	1 to 9 For a higher resolution a scale of 101-199 is available	Lux level setting to prevent the luminaires being switched on if the ambient light level is sufficient. <i>Note: the Lux Level Off value must always be greater than the Lux Level On value.</i>	✓	✓
Lux off level (Switch level off)	9	1 to 9 For a higher resolution a scale of 101-199 is available	Lux level setting to switch the luminaires off if the ambient light level goes above the setting.	✓	✓

User Modes					
Override On	-	-	If the lights are off, sending the IR command will turn them on immediately and revert to automatic operation using the manual timeout period .	✓	✓
Override Off	-	-	If the lights are on, sending the IR command will turn them off immediately. After the manual timeout period (described above), the sensor will revert to automatic.	✓	✓
Cancel	-	-	Cancels the on or off override, returning the unit to normal operation.	✗	✓

This page intentionally left blank


This page intentionally left blank

Technical data


Dimensions	See diagrams opposite
Weight	0.1kg
Supply Voltage	230VAC +/- 10%
Frequency	50Hz
Maximum Load	10 Amp resistive and incandescent lighting 6 Amp fluorescent lighting and resistive 3 Amp compact fluorescent lighting 3 Amp low energy lighting 3 Amp low voltage lighting (switch primary of transformer) Fluorescent lighting (max 6 fittings recommended) For fluorescent lighting total power factor correction capacitance must not exceed 40µF. 3 Amp fans and ventilation equipment Switch SON lighting loads via a contactor Minimum load 100mA
Power consumption	On 745mW, Off 264mW
Terminal Capacity	2.5mm ²
Temperature	-10°C to 35°C
Humidity	5 to 95% non-condensing
Material (casing)	Flame retardant ABS and PC/ABS
Type	Class 2
IP rating	IP40
Compliance	EMC-2004/108/EC LVD-2006/95/EC



SWITCHLITE MRE SLDD PC

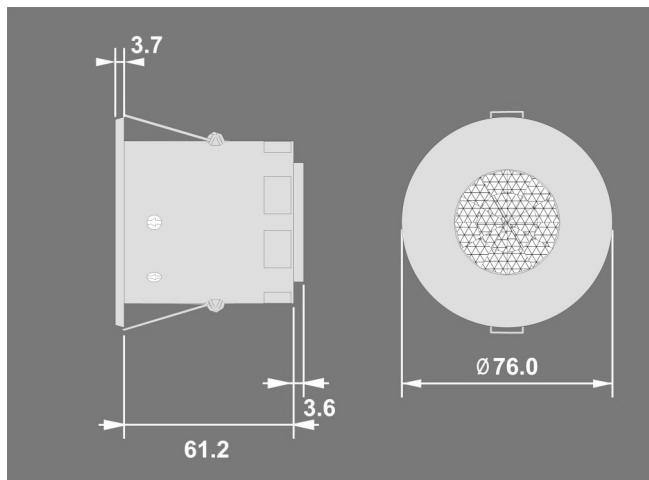

SWITCHLITE KIT MSF

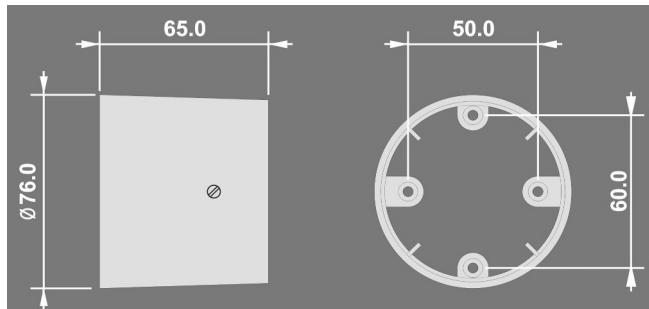

Part numbers

	Part number	Description
Detector	96239828	SWITCHLITE MRE SLDD PC
Accessories	96218678	SWITCHLITE KIT MSF
	96240295	SWITCHLITE CC PROGRAMMER
	96239829	SWITCHLITE IR PROGRAMMER

IMPORTANT NOTICE!

This device should be installed by a qualified electrician in accordance with the latest edition of the IEE Wiring Regulations and any applicable Building Regulations.

THORN
Thorn Lighting Ltd
Durhamgate
Spennymoor
Co Durham
DL16 6HL
United Kingdom
Tel: + 44 (0) 1388 420042
www.thornlighting.com
technical@thornlighting.com