



E3M & E3TX

Non maintained mode
Éclairage non permanent
Bereitschaftsschaltung
Beredskapsdrift
Circuito in emergenza
Praca awaryjna

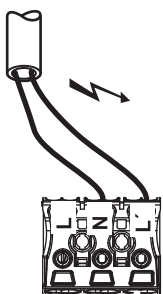


X 0 AD 180

Maintained mode
Éclairage permanent
Dauerschaltung
Permanentdrift
Circuito permanente
Praca ciągła

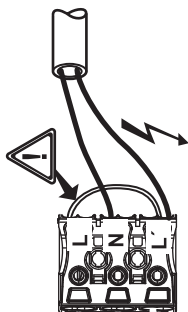

X 1 AD 180

Switched maintained mode
Éclairage permanent activé
Geschaltetes Dauerlicht
Kopplat permanente ijus
Luce permanente accesa
Pracą ciągłą przerywana

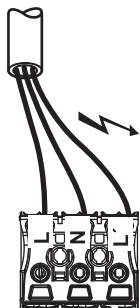


X 1 AD 180



E3TX


SelfTest (local)
Auto Test (local)
Autotest (lokal)
Självtest (lokalit)
Autotest (locale)
Autotest (wewnętrzny
układ testujący)

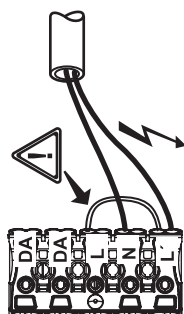

X 1 AD 180




Addressable Test (central)
Test adressable (central)
Adressierbarer Test (zentral)
Adresserbar test (central)
Test indirizzamento (centrale)
Test adresowalny (zdalny układ
testujący)

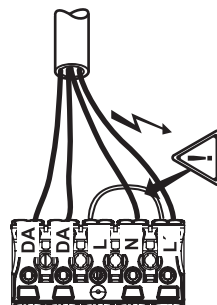


X 1 ACD 180

THORN

AREA/SPOT

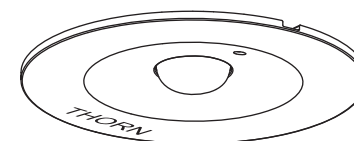

ROUTE

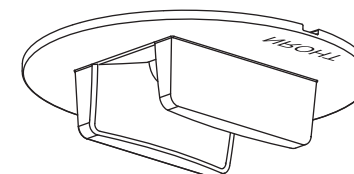

VOYAGER LED MRE IP20/IP40



(CE) Montážni návod
(DE) Montageanleitung
(DK) Monteringsvejledning
(EE) Paigaldusjuhend
(FI) Asennusohje
(FR) Notice de montage
(HU) Szerelési útmutató
(IT) Istruzioni di montaggio

(LT) Montavimo Instrukcijos
(LV) Instalācijas instrukcija
(NO) Monteringsanvisning
(PL) Instrukcja montażu
(RU) Инструкция по монтажу
(SE) Installationsanvisning
(UK) Installation Instructions

