



E3M & E3TX

Non maintained mode
Éclairage non permanent
Bereitschaftsschaltung
Beredskapsdrift
Circuito in emergenza
Praca awaryjna

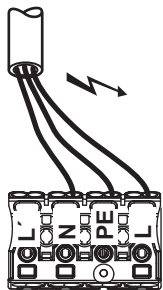


X 10 AD 180

Switched maintained mode
Éclairage permanent activé
Geschaltetes Dauerlicht
Koplat permanente ijus
Luce permanente accesa
Pracą ciągłą przerywana

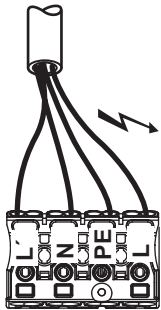

X 1 AD 180

Maintained mode
Éclairage permanent
Dauerschaltung
Permanentdrift
Circuito permanente
Praca ciągła

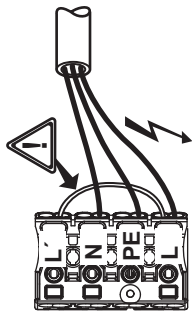


X 1 AD 180



E3TX


SelfTest (local)
Auto Test (local)
Autotest (lokal)
Självtest (lokalt)
Autotest (locale)
Autotest (wewnętrzny
układ testujący)

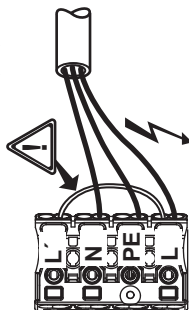


X 1 AD 180




Addressable Test (central)
Test addressable (central)
Adressierbarer Test (zentral)
Adresserbar test (centralt)
Test indirizzamento (centrale)
Test adresowalny (zdalny układ
testujący)

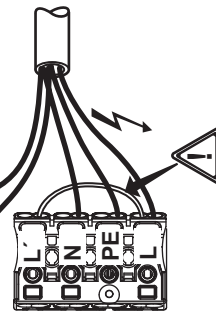

X 1 ACD 180

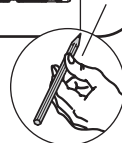

THORN

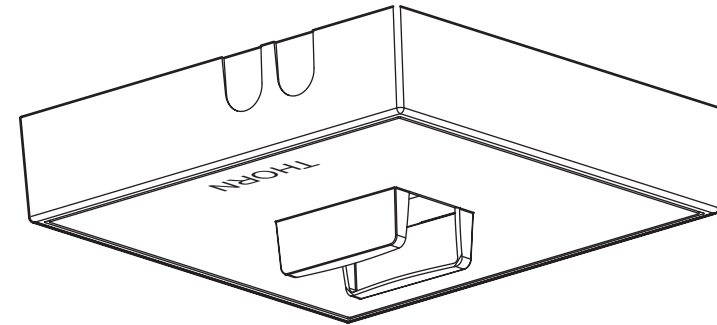

VOYAGER LED ROUTE MCE IP40

(CE) Montážni návod
(DE) Montageanleitung
(DK) Monteringsvejledning
(EE) Paigaldusjuhend
(FI) Asennusohje
(FR) Notice de montage
(HU) Szerelési útmutató
(IT) Istruzioni di montaggio

(LT) Montavimo Instrukcijos
(LV) Instalācijas instrukcija
(NO) Monteringsanvisning
(PL) Instrukcja montażu
(RU) Инструкция по монтажу
(SE) Installationsanvisning
(UK) Installation Instructions

