

Key acknowledgement: tūūt (0,2 sec)
input OK: tūūūūūūūūūūūūūūūū (1sec)
input false: tūūt...tūūt...tūūt (6x)
Alarm: tūūt...tūūt...tūūt (60 sec)

factory settings:switchcode 1: **1 2 3**switchcode 2: **4 5 6**switch term 1: **3 Sek.**switch term 2: **3 Sek.**Mastercode: **7 8 9****current attitudes:**

.....

.....



.....sec..


.....sec.

.....





Programming:**Note:**

The codes must be selected in such a way, that these are assigned clearly. (Not allowed: Code1=1234
Code2=123)





If no switchcode is programmed (code programming mode is terminated with the key  without former input of a code) the switching contact may be activated by pushing of the key .

In order to activate the switch mode, the switch term =0 seconds has to be adjusted. By pushing of the key , the current procedure may be aborted.





Switchcode 1:

- push and hold key , additionally key , pushed and held for 3 seconds, until audio signal sounds.
- enter current mastercode - audio signal sounds.
- push key  - audio signal sounds.
- enter switchcode and push key  - audio signal sounds.





Switchcode 2:

- push and hold key , additionally key , pushed and held for 3 seconds, until audio signal sounds.
- enter current mastercode - audio signal sounds.
- push key  - audio signal sounds.
- enter switchcode and push key  - audio signal sounds.




 
Switchterm 1:

- push and hold key , additionally key , pushed and held for 3 seconds, until audio signal sounds.
- enter current mastercode - audio signal sounds.
- push key  - audio signal sounds.
- enter switch term in sec. (1-99 or 0) and push key  - audio signal sounds.

Switchterm 2:

 
 

- push and hold key , additionally key , pushed and held for 3 seconds, until audio signal sounds.
- enter current mastercode - audio signal sounds.
- push key  - audio signal sounds.
- enter switch term in sec. (1-99 or 0) and push key  - audio signal sounds.

Mastercode:

- push and hold key , additionally key , pushed and held for 3 seconds, until audio signal sounds.
- enter current mastercode - audio signal sounds.
- push key  - audio signal sounds.
- enter new mastercode and push key  - audio signal sounds.

restore/backup Mastercode:

If your mastercode has been lost, you may backup to factory setting (789) and restore.

- switch off voltage supply.
- push and hold keys  +  +  simultaneously.
- restart voltage supply - audio signal sounds.