







THORN






BETA 3 PLASTERBOARD KIT

Product Description	SAP code	Lenght	Width	Height
BETA 3 PLASTERBOARD KIT Q600	96635030	630	630	71
BETA 3 PLASTERBOARD KIT Q625	96635032	655	655	71
BETA 3 PLASTERBOARD KIT 3x12	96635447	1235	335	71

[CZ] Montážní návod
 [DE] Montageanleitung
 [DK] Monteringsvejledning
 [EE] Paigaldusjuhend
 [FI] Asennusohje
 [FR] Notice de montage
 [HU] Szerelési útmutató
 [IT] Istruzioni di montaggio

[LT] Montavimo Instrukcijos
 [LV] Instalācijas instrukcija
 [NO] Monteringsanvisning
 [PL] Instrukcja montażu
 [RU] Инструкция по монтажу
 [SE] Installationsanvisning
 [UK] Installation Instructions

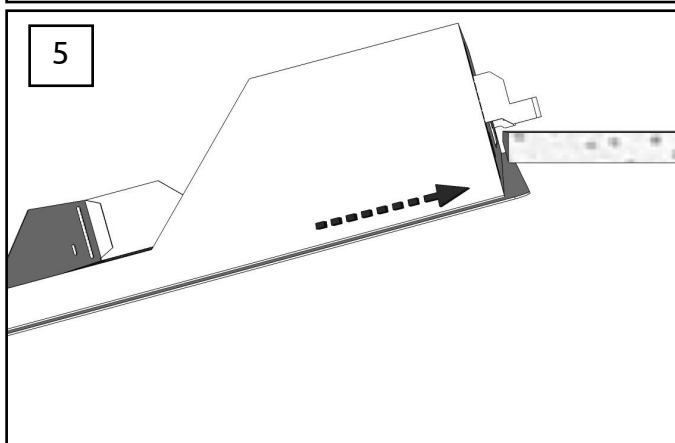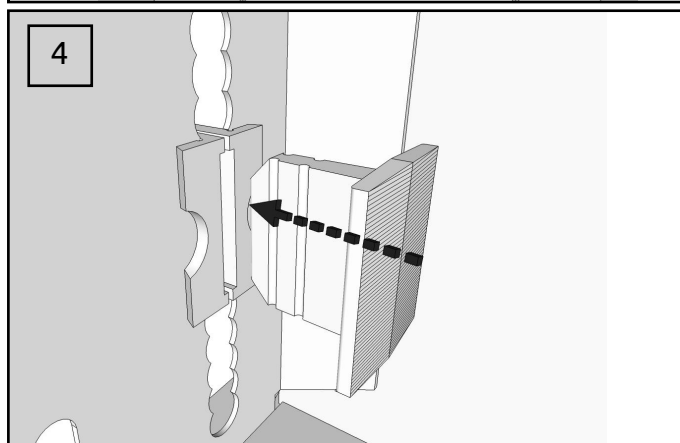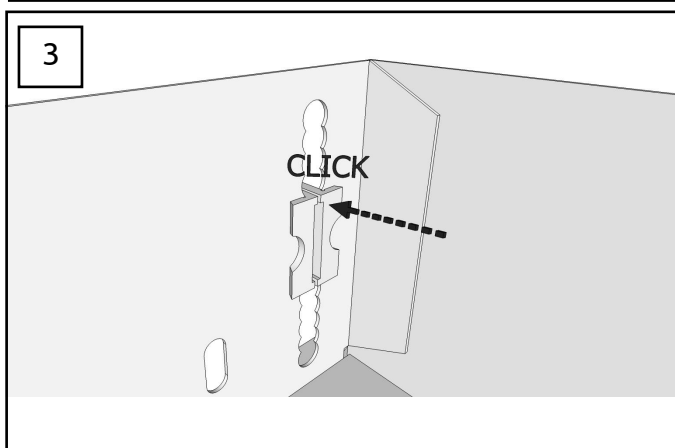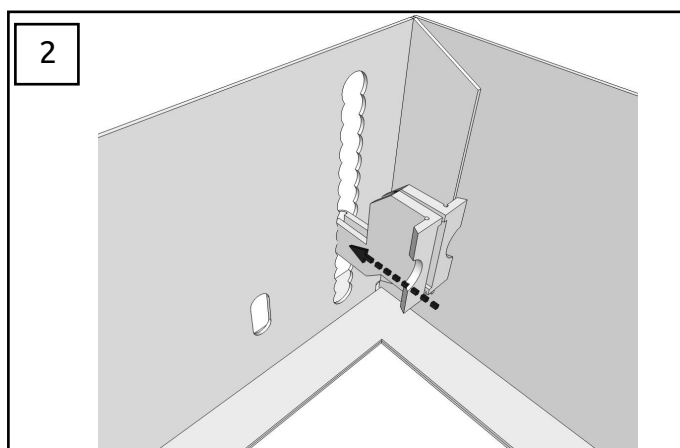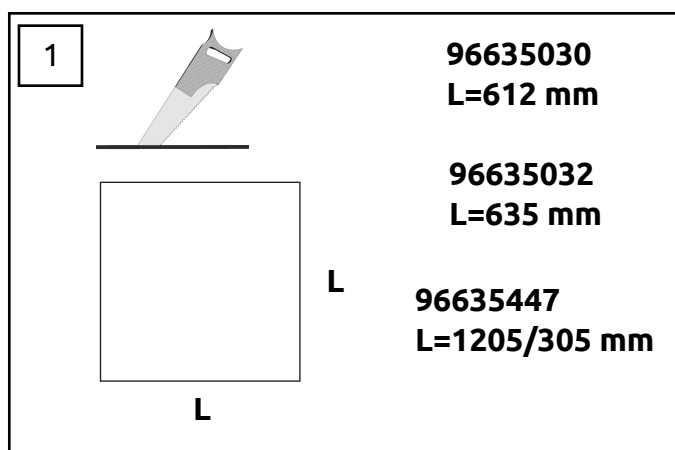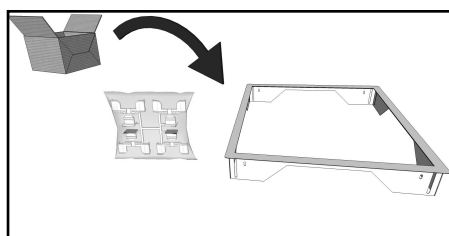

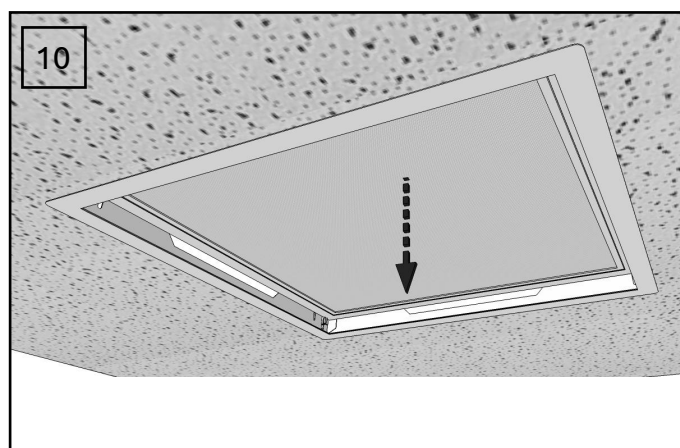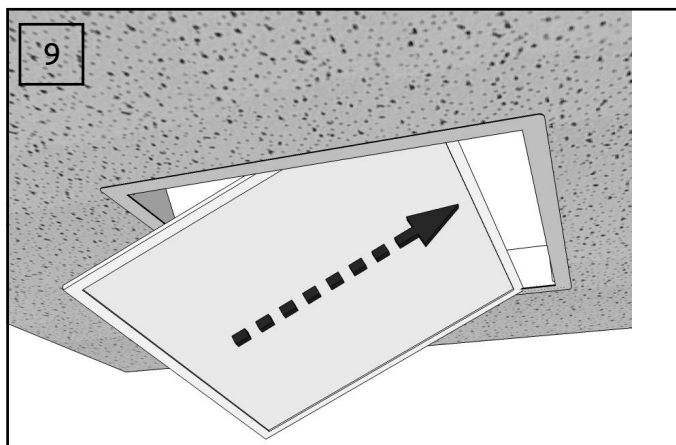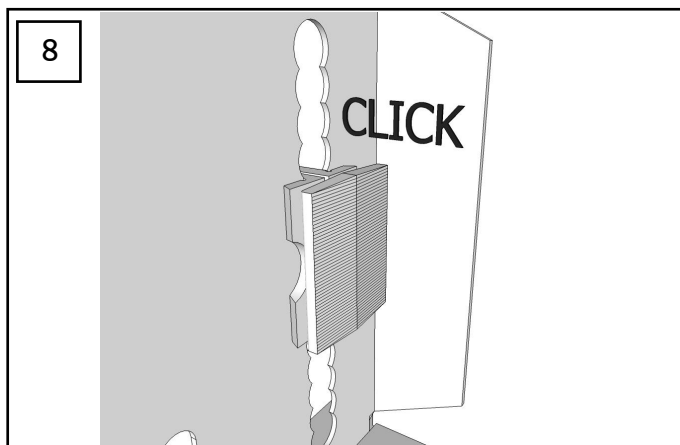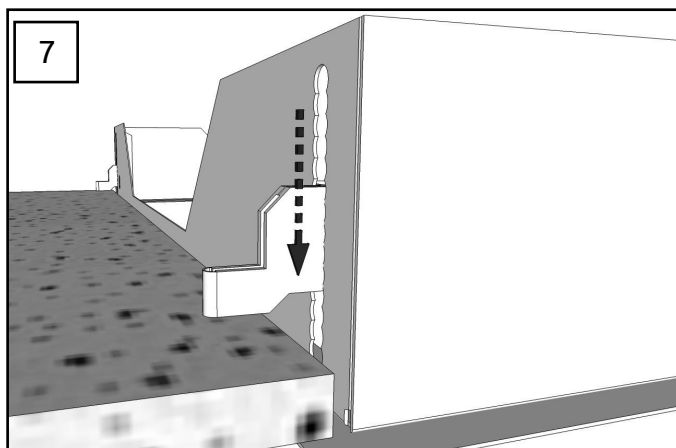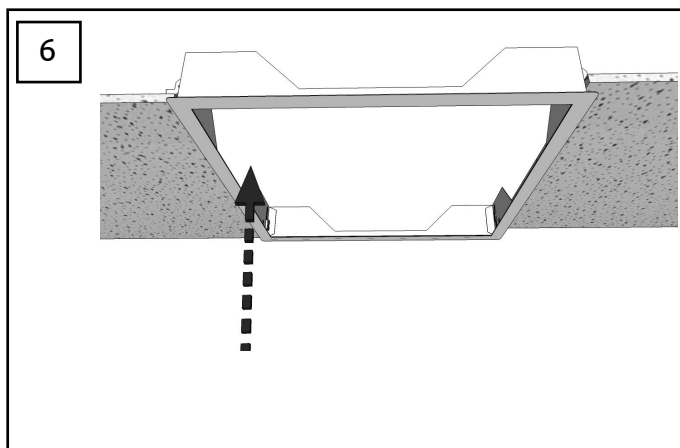

THORN